
Single-wire connection


| | ⊕ ⊖ Z2 |
|---------------|--|
| S S | #14AWG-#4AWG |
| Wire 1 and 2 | (2.5mm ² -25mm ²) |
| ₩. | #14AWG-#10AWG |
| Wire 2* | (2.5mm ² -6mm ²) |
| (| 31 lb·in(3.5 N·m) |

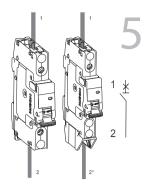


B1NQ |


Multiple-wires connection

| | ⊕_⊝ Z2 |
|-----------------------------|--------------------------------|
| Wire 1 and 3 | #14AWG-#4AWG (2.5mm²-25mm²) |
| Wire 2 and 4 Wire 2* and 4* | #14AWG-#10AWG (2.5mm²-6mm²) |
| (| 31 lb·in(3.5 N·m) |

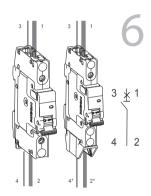

B1NQ

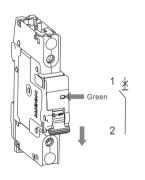

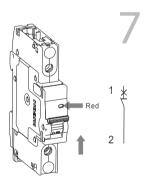

B1NQ


Noark



Printed with environment-friendly paper

Copyright Noark.All Rights Reserved
www.noark-electric.com
05/2015

Miniature Circuit Breaker

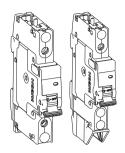

Installation Instructions

Notice d'installation

Instrucciones de montaje

Noark

B₁NQ




WARNING

2

DO NOT ATTEMPT TO INSTALL OR PERFORM MAINTENANCE ON EQUIPMENT WHILE IT IS ENERGIZED. DEATH, SEVERE PERSONAL INJURY, OR SUBSTANTIAL PROPERTY DAMAGE CAN RESULT FROM CONTACT WITH ENERGIZED EQUIPMENT. ALWAYS VERIFY THAT NO VOLTAGE IS PERSENT BEFORE PROCEEDING WITH THE TASK, AND ALWAYS FOLLOW GENERALLY ACCEPTED SAFETY PROCEDURES.

NOARK IS NOT LIABLE FOR THE MISAPPLICATION OR MISSINSTALLATION OF IT'S PRODUCTS

B1NQ

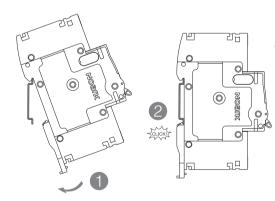

B1NQ

